

Vividia® Ablescope® USB Borescopes for iPhone iPad Android

Model: VA-400i & VA-980i & VA-101i & VA-106i & G-810i & G-610i & FC-8050i & UM-030i



Vividia VA-400i and VA-980i are newly developed products in 2023, which can be directly used on iPhone, iPad, Android devices* and Windows PC.

Software and App compatible with VA-400i & VA-980i cameras

1. Windows System:

Windows 11/10/8/7/XP: Download our specific software "UseePlus" from our website, oasisscientific.com or Vividia-tech.com.


2. Android Phones and Tablets: (Connect with OTG cable)

Download from Google Play Store. "UseePlus".

Note: Not all Android devices are compatible with our USB cameras.

3. iPad & iPhone (for iOS 11 and later)

Download from Apple App Store. "UseePlus".

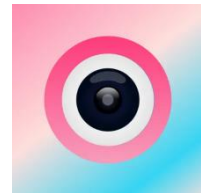

How to use VA-400i & VA-980i & VA-101i & VA-106i & G-810i & G-610i

1. Choose what display device you want to use, and make sure to download the needed app or software.
2. Plug **Ablescope USB camera** in your device through USB plug or adaptor. Open the software or app.
3. You can see live images, take pictures and videos with the software.
4. Pressing the plunger head on the handle to change the view direction of the Ablescope camera from front to side to backside.
5. As the angular lock as desired to fix the camera head position.
6. Press the button on the handle to take a picture or use the button on the app.
7. Note: The LED light brightness cannot be adjusted and turned off.

Safety Precaution

1. The borescope should be used under 60°C (140°F). High temperature can increase video noise, even damage the camera sensors and electronics.
2. Do not immerse the camera in oils, water, gasoline, or other fluids for long time >5min.
3. Clean the lens with clean, soft fabric and/or Q-tips with alcohol.
4. Use high quality OTG cable and USB extension cable when needed. And make sure the connection is tight and secure. This will affect the image quality.
5. A phone/tablet case could affect OTG cable connection in some cases. Please remove the case if needed.
6. Avoid moisty environment, temperature shock and extreme temperatures. Dry surroundings help the life of the products.
7. Avoid dropping, violent vibrations, strong collision, or distortion.
8. Keep the device away from chemicals, explosive substances, and fire hazards.

Warranty

One-year limited product quality warranty

Vividia Technology

www.vividia-tech.com

2023-12-25
