

Vividia™ USB V14530 Microscope Borescope Endoscope

Model: V14530

USER'S GUIDE



Oasis Scientific Inc.

SYSTEM REQUIREMENTS

For best picture quality, the following specifications are recommended:

1. IBM PC compatible computer
2. Intel Pentium III processor or above
3. 128M RAM or above
4. At least two USB ports (For best effect, USB 2.0 port is recommended).
5. Windows XP、 Vista and Windows 7, 8 and 10.

TECHNICAL SPECIFICATION

Diameter of camera probe:	14.3mm
Side-view mirror tube:	14.8mm
Focus range:	Autofocus, 20mm to 50 meter
Sensor resolution:	5MP, 2592x1944
USB interface:	USB 2.0
Max. Magnification on 20"	~30x
Image and video format:	jpg; mp4
Length of insertion tube:	3.5 meter
Insertion tube:	Semi-rigid, flexible moldable

PACKING LIST

USB 14mm auto-focus microscope borescope, accessories, steel stand, user manual.

Software and Apps

Windows OS devices (Desktop, laptop, and Windows tablet)

1. For Windows 10, the built-in Microsoft app “Camera” can be used directly.
2. For Windows10, 8, 7 and old versions, download “amcap” software from our website or the product page.

Mac OS computer:


For Mac, the built-in software “Photo Booth” is a good choice.

Android devices:

Not all android devices are compatible with a USB camera.

The suitable apps can be found on Google Play Store. The most used apps are: “OTG View”, “mScopes”, “UsbWebCamera”, “CameraFi” etc.

Accessories

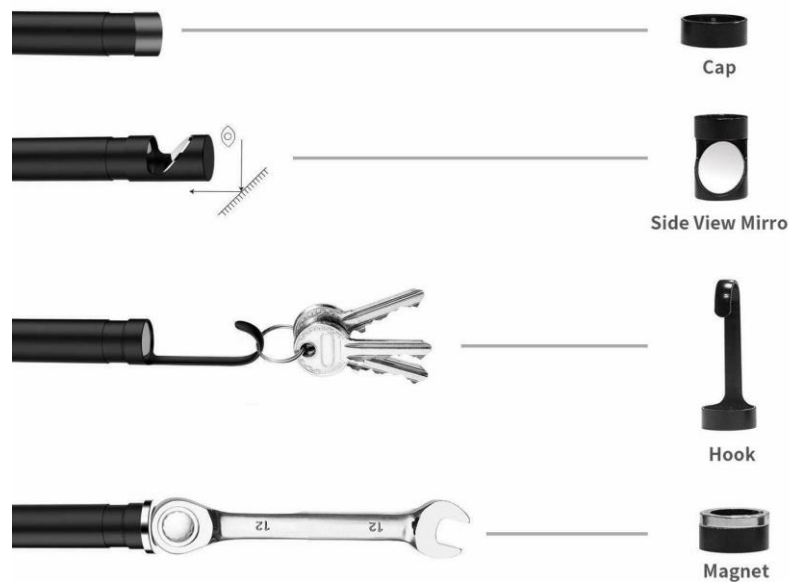

Company Info

Oasis Scientific Inc.

3110 Wade Hampton Blvd. Suite 18

Taylors, SC 29687

USA

info@oasisscientific.com